

ShoreTel 230/230g IP Phone Quick Reference

PHONE OPERATION

Place Calls

Use the Speakerphone or a Headset


Use the Directory

Make a Conference Call

Use the Intercom


Redial and Check Missed Calls

Dial Paging Extension

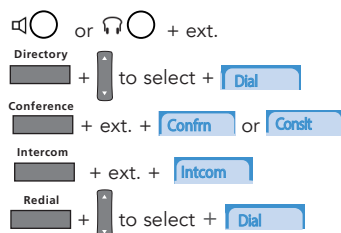

number provided by administrator

lift handset or Answer or Speakerphone or Headset

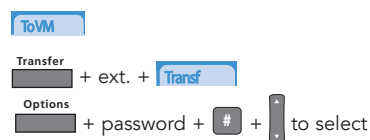

select appropriate call key

Answer Calls

Send a Call to Voice Mail

Divert a Call

Select a Ring Tone

Adjust Handset, Headset,
or Speakerphone Volume

Answer Call Waiting

Interact with Calls

Mute a Call

Place a Call On or Off Hold


Transfer a Call

Merge Calls

Park Calls

Unpark Calls

Change Availability State

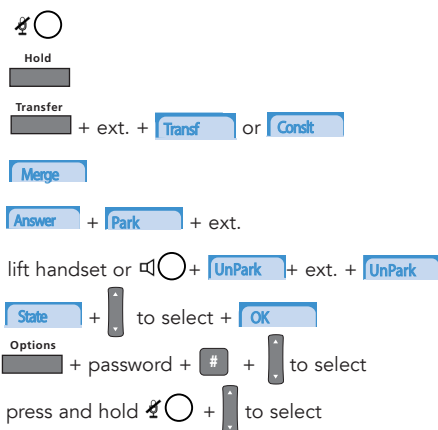


Log In and Out of Workgroups

Adjust the Display Contrast

VOICE MAIL

Log Into the Main Menu

 Log In from Another Extension



Note: For more information about voice mail features, please consult the Voice Mail Quick Reference.

OFFICE ANYWHERE CODES


Transfer a call

Conference a call

Hold a call

Hang up

Access other star codes

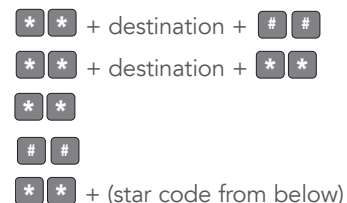

QUICK REFERENCE OF COMMON STAR CODES

Park a call

UnPark a call

Pick Up a Remote Extension

Pick Up the Night Bell

Use the Intercom

Barge In

Silent Monitor

Toggle the Hunt Group Status


Whisper Page

Change Availability and Forwarding

Change Extension Assignment

Unassign Extension Assignment


Assign Extension to External Number

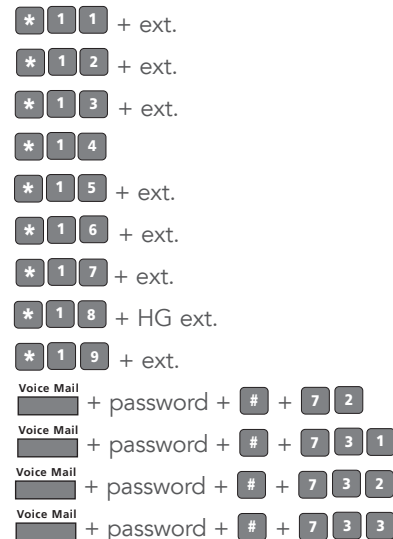

TROUBLESHOOTING


View Phone Information

 Reboot Your Phone



Note: For additional details on the information contained in this Quick Reference card, please consult the IP 230/230g User Guide.

ShoreTel 230/230g IP Phone Quick Reference

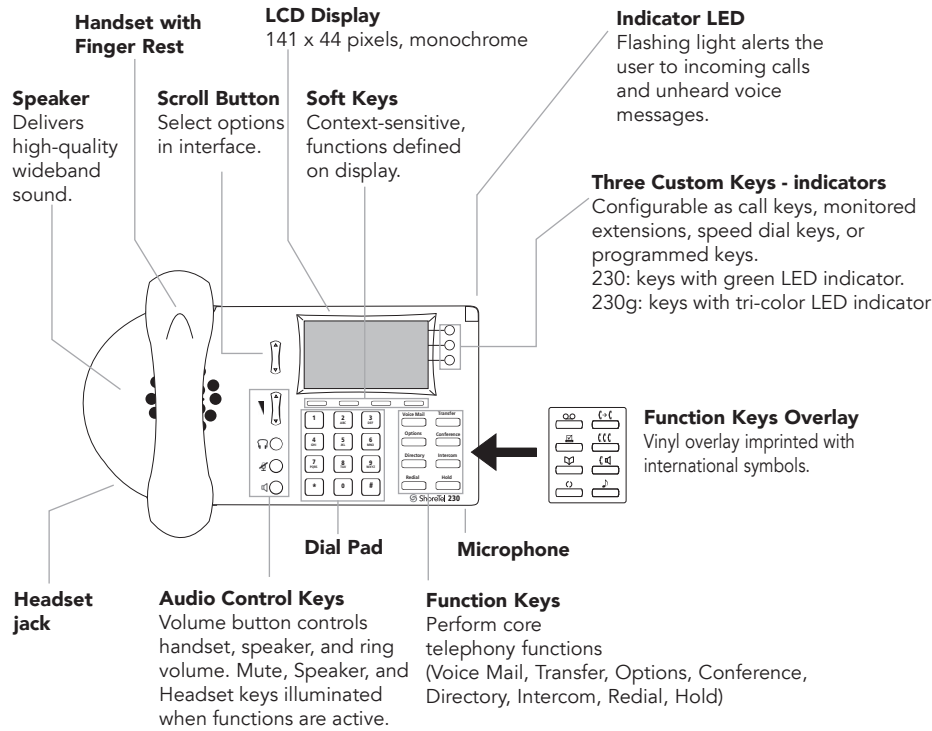

Note: You can connect a supported headset into the 230/230g IP Phone by plugging the headset into the headset jack at the left corner of the phone chassis. Contact your system administrator for details.

GUIDE TO LEDS

ShoreTel 230/230g IP phones provide visual cues to display operational status

230 IP Phone Operational signals


- Steady Green - in use by you
- Blinking Green - (Fast) on hold or call parked
- Blinking Green - (Slow) incoming call

230g IP Phone Operational signals


- Steady Green - in use by you
- Blinking Green - (Slow blink: 1s on/1s off) incoming call
- Blinking Orange - (Fast blink: .25s on/.25s off) on hold or call parked
- Steady Orange - extension's availability state set to Do Not Disturb
- Steady Red - in use by other party (applies to BCA and Extension Monitor)

GUIDE TO STATUS ICONS

ShoreTel IP 230/230g Idle Interface

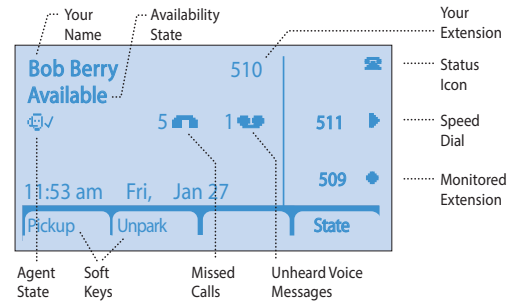

ShoreTel IP 230/230g Outbound Call

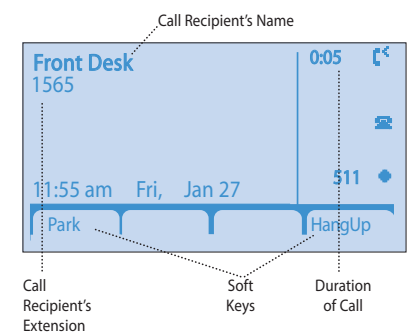

Main Display

- Unheard Voice Messages
- Missed Calls
- Logged Into Workgroup
- Logged Into Workgroup, In Wrap-Up
- Logged Out of Workgroup

Custom Keys - Call

- On Hook
- Off Hook
- Inactive / Do Not Disturb
- Incoming Call (Animated)
- On a Call
- On a Conference Call
- Call On Hold / Parked
- Remote Hold

Custom Keys - Monitored Extension

- Idle
- Inactive / Do Not Disturb
- Unheard Voice Messages
- Do Not Disturb / Unheard Messages
- Incoming Call (Animated)
- On a Call
- Incoming Call and On a Call
- On a Conference Call
- Call On Hold / Parked

Custom Keys - Speed Dial

- Speed Dial Extension